

PRINTING AND FITTING SPECIFICATIONS


- Print this document on A4 sheets of paper (21 x 29.7cm).
- Ensure you print at 100 % scale.
- Measure both sides of this box to check scale is correct.
- Fit the prints together following the numbering system on the edge of each sheet. Ensure crosses are aligned.
- Tape the sheets together and cut around the Pack's outline
- When fitting this printed template to your bike, keep in mind that the Frame Pack will be more flexible as it is built from fabric.

10cm
3.9in

10cm / 3.9in


SCALE EXAMPLE OF FINAL TEMPLATE

A1

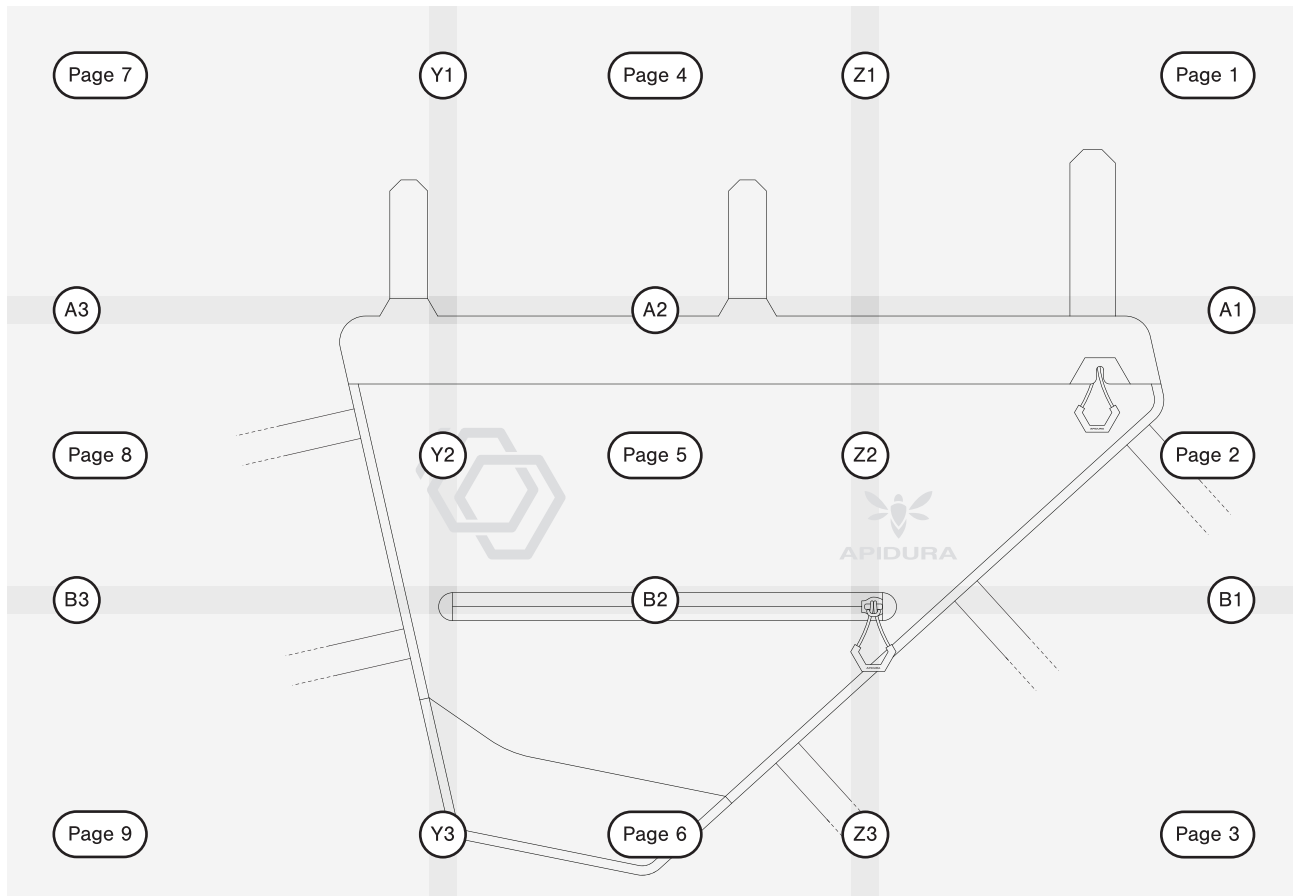


X Z1

X

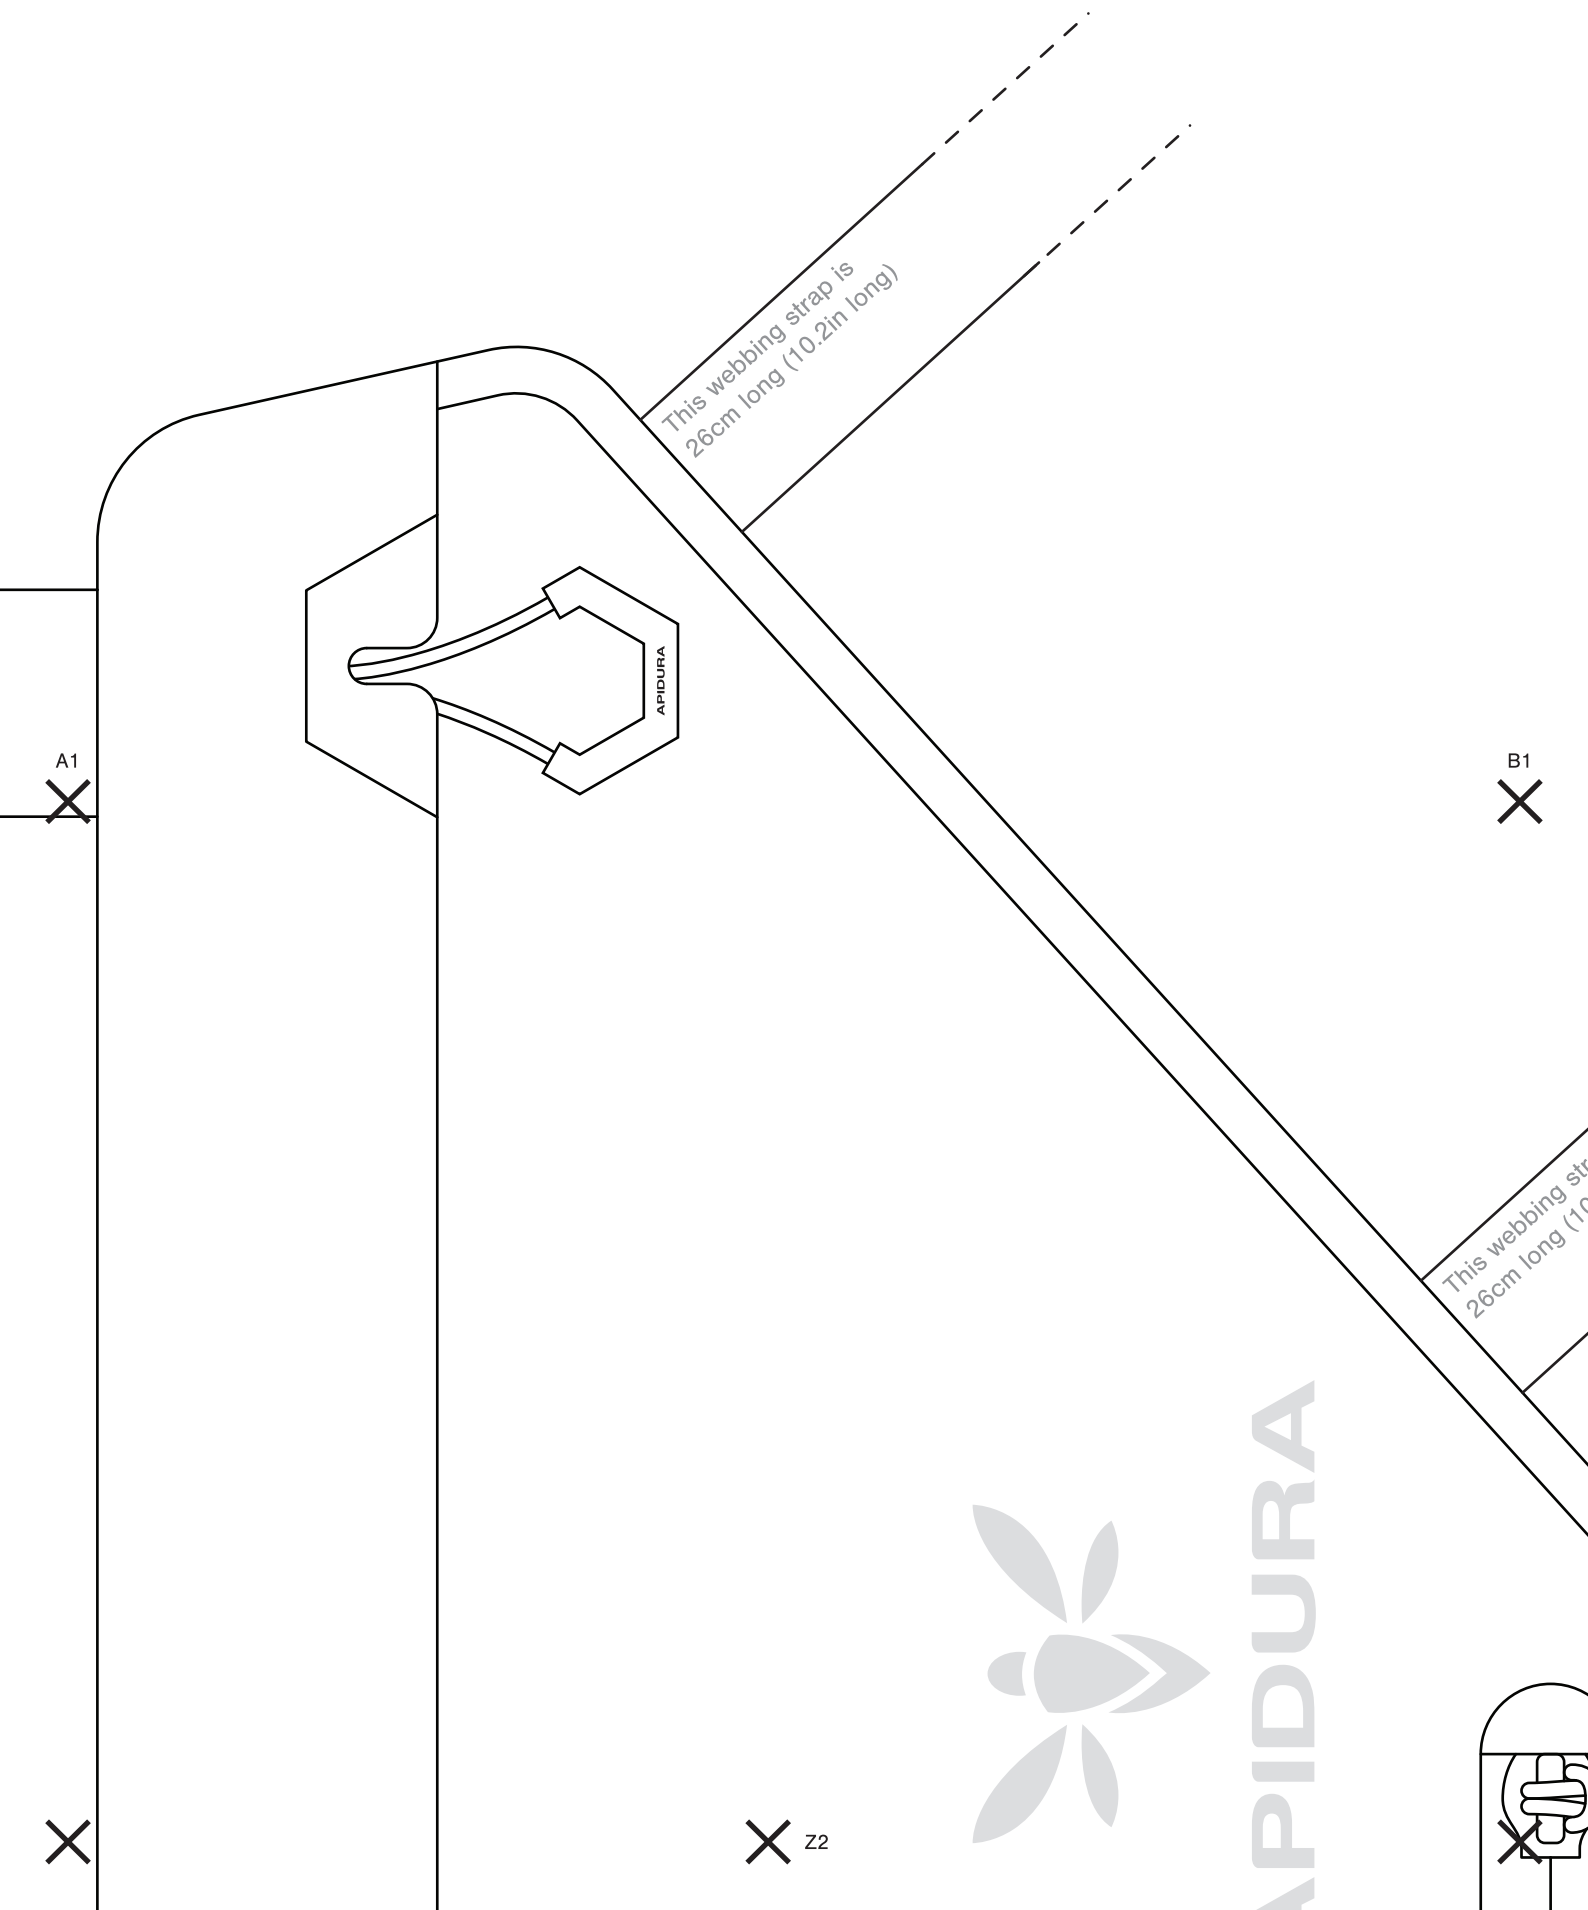


B1
✕

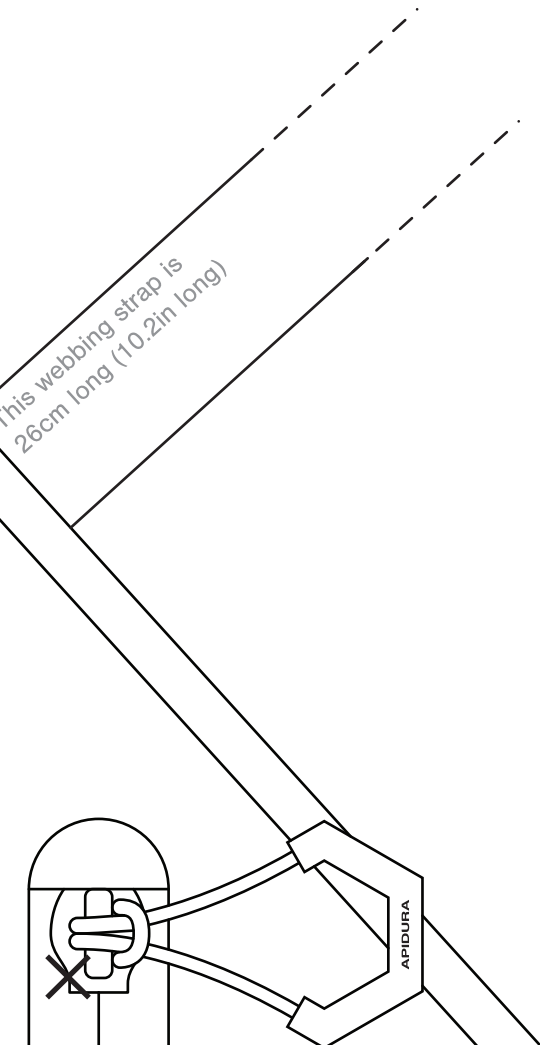

✕ Z3

X Z1

X

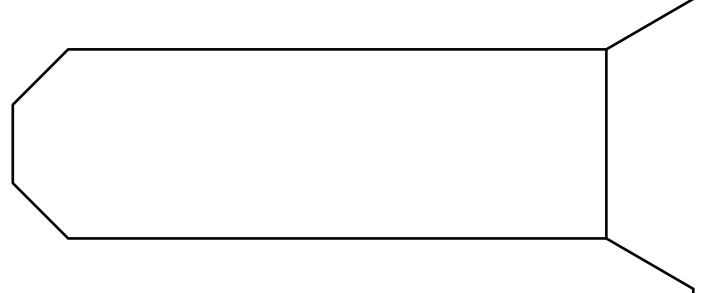

A2
X

X Y1

X




API



EXPEDITION FULL FRAME PACK (14L)
Page 5



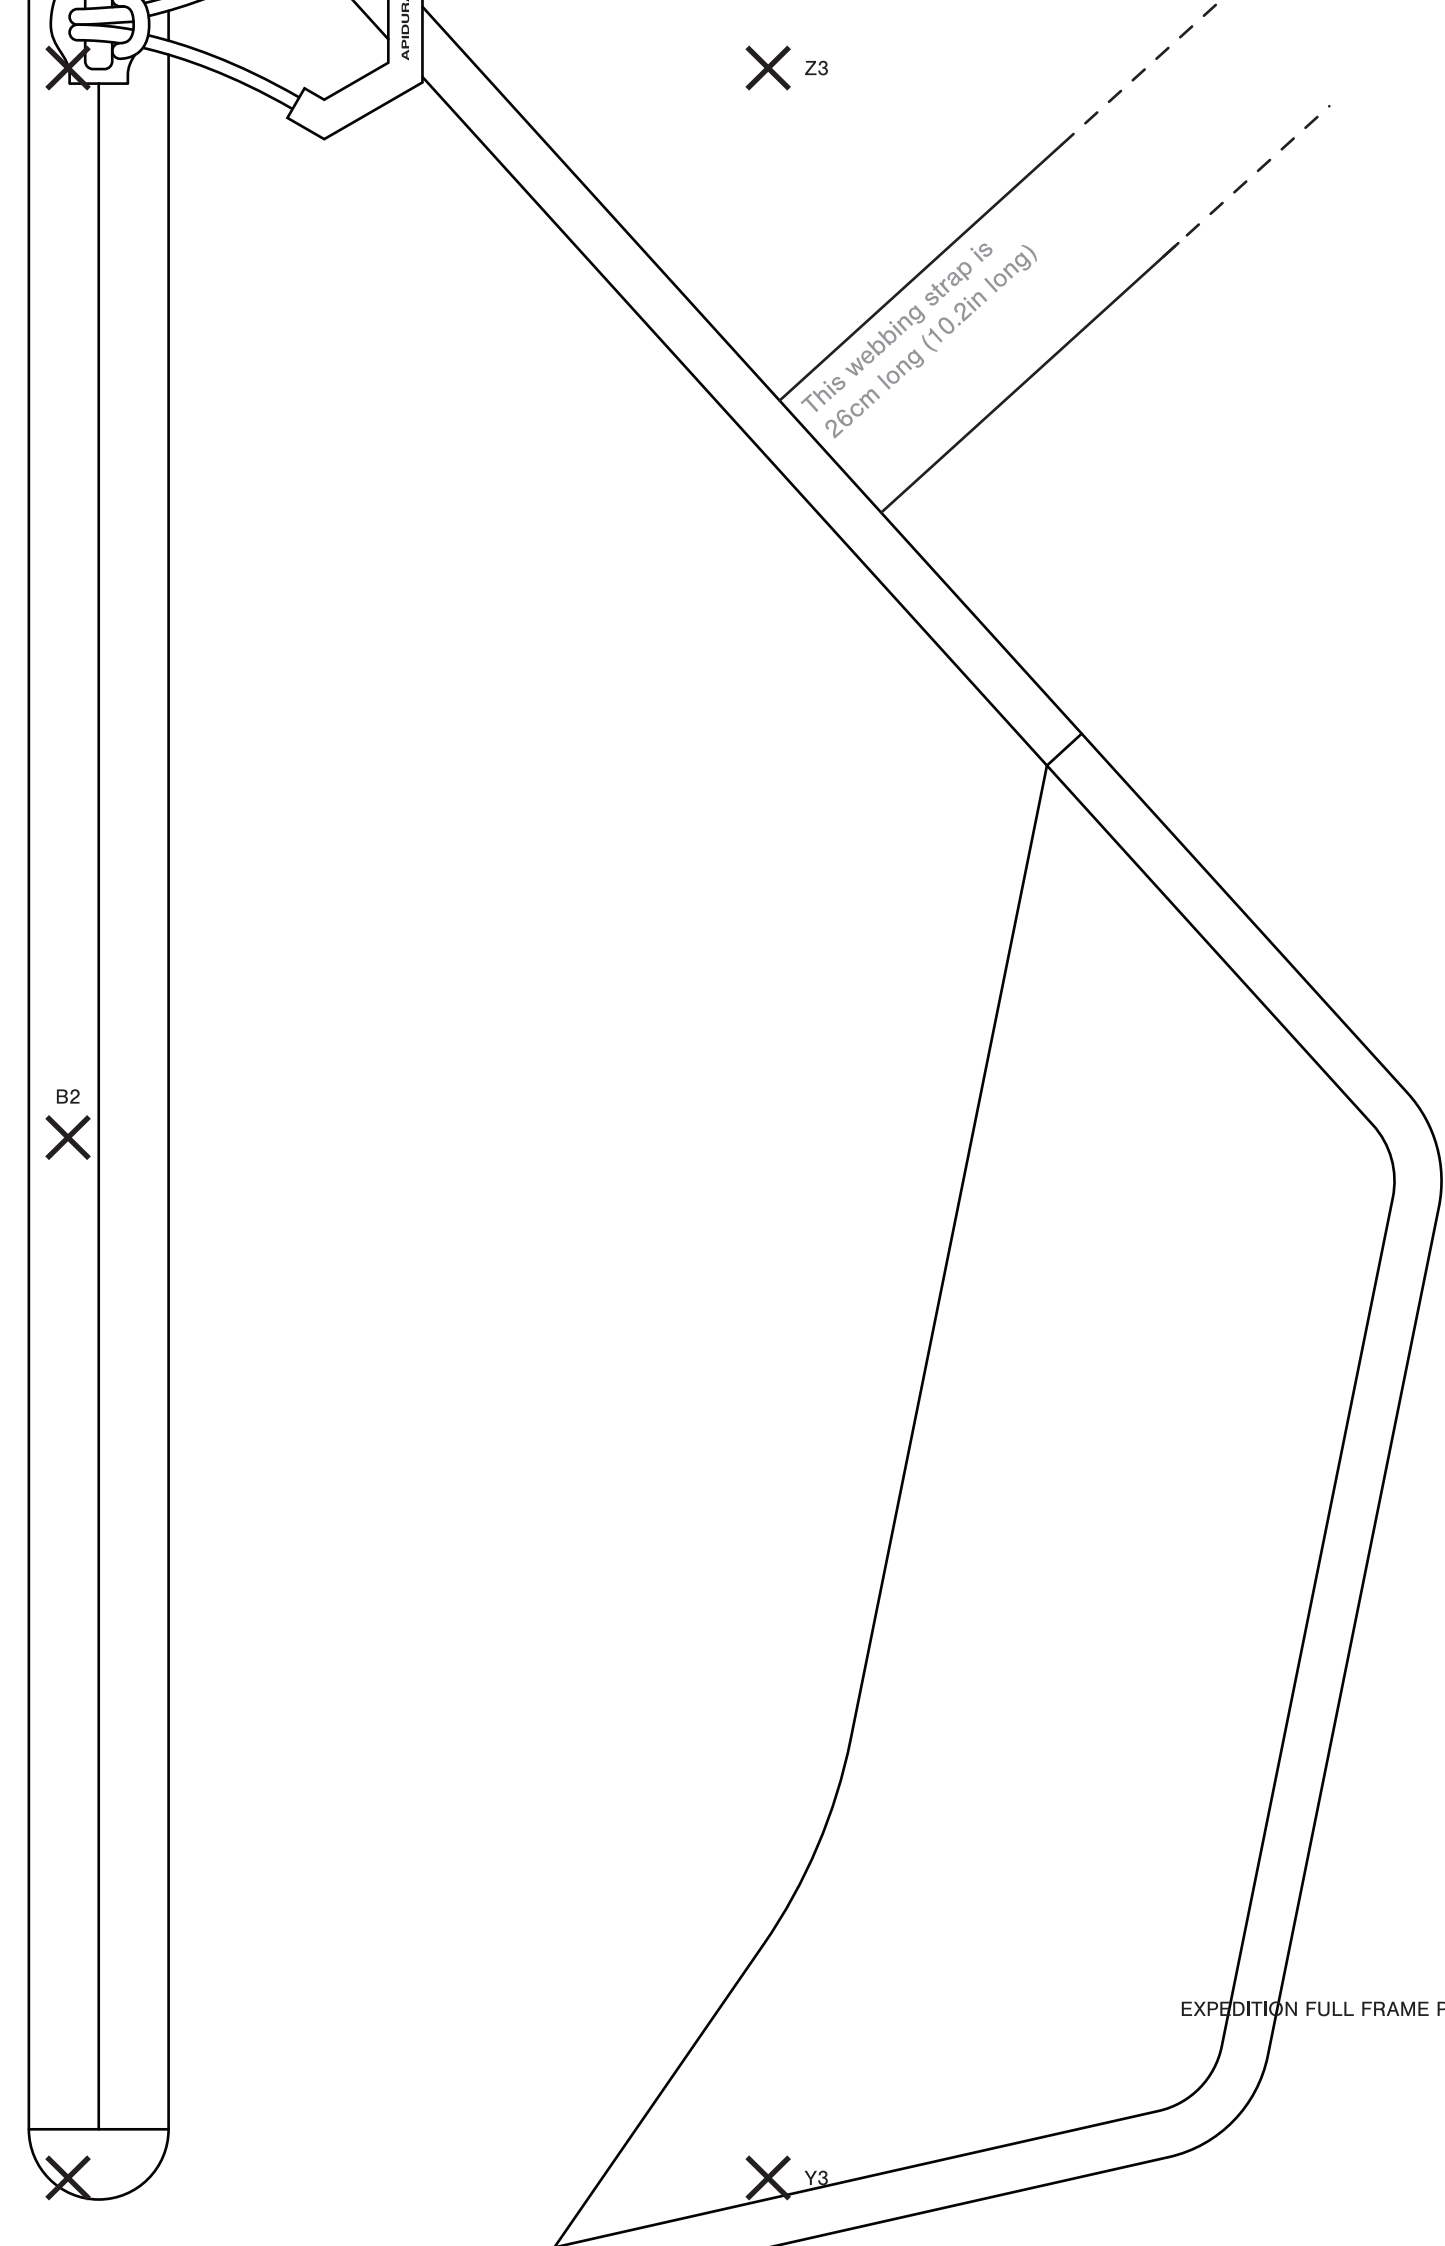

APIDUR

X Z3


This webbing strap is
26cm long (10.2in long)

B2
X

X Y3

X Y1

X

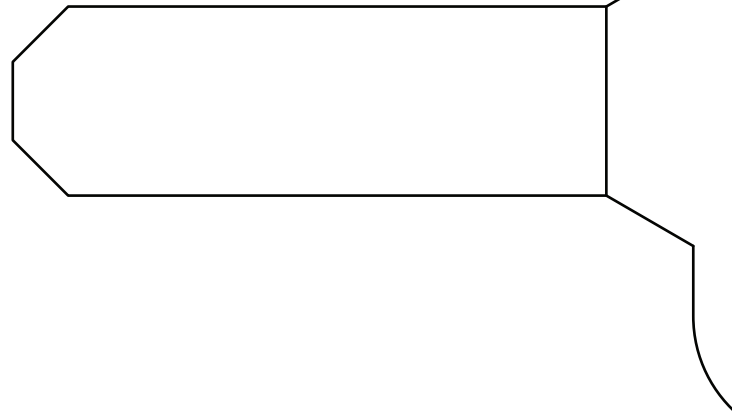

A3
X


EXPEDITION FULL FRAME PACK (14L)

This webbing strap is
21cm long (8.3in long)

Y2

A3

B3

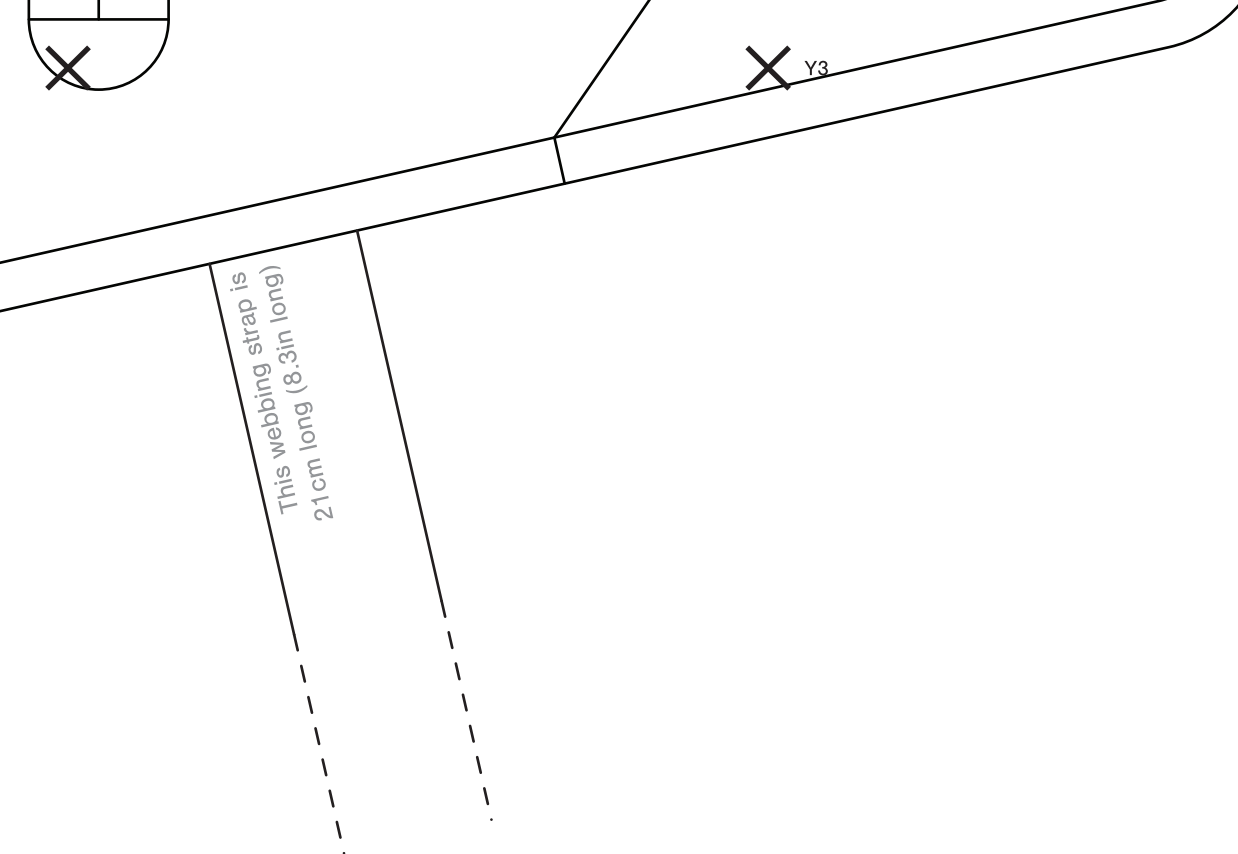

This webbing strap is
21cm long (8.3in long)

X Y3

B3
X